


SETTING THE VOLUME

Press the volume control button to cycle through the different volumes. (5 volumes 0 to 110 dB)

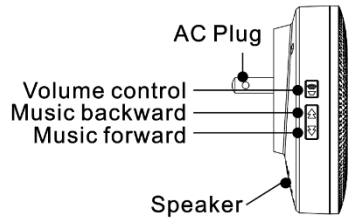

CHANGING THE CHIME SOUND

1. Press the Fwd / Bckwd buttons to cycle through and select your desired chime
2. Press & hold the volume control button for 5 seconds – until a “chirp” chime is played and the LED indicator starts to flash. (You are now in program mode)
3. Press the doorbell button or activate the sensor within 5 seconds - The selected chime will play and your chime has been saved.




Select melody



Hold volume button for 5s



If a ‘chirp’ chime is heard the program/pairing has not saved and you will need to restart the process from step 2.

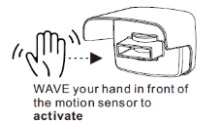

Repeat the above to steps to select your desired chime for each doorbell button, drive way sensor, motion sensor and door sensor.

REGISTER FOR FREE 18 MONTH GUARANTEE

Register your product on mydome.co.uk for your free extended guarantee.